
3.2/

14.8cm

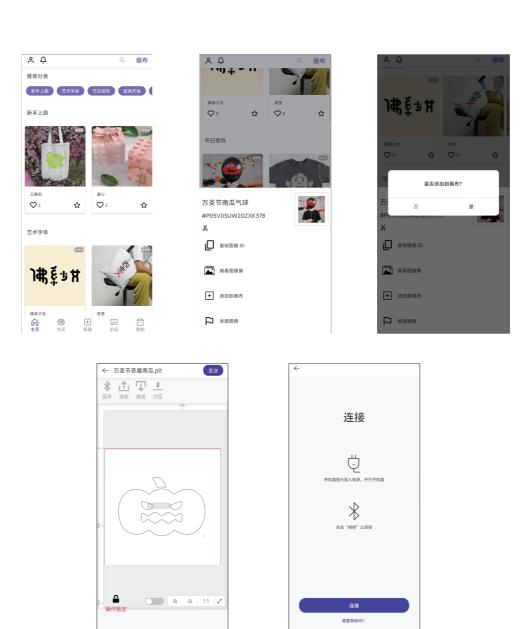







神缺陷)、不适合儿童本身单独使用或者缺乏经验和相关知识人士使用。在操作过程中,请将易燃易爆物品或宠物远离机器。

更换切割刀片时,请确保将机器关闭并从电源插座上拔下,确保在远离水


更换切割刀片时,请确保将机器天闭开从电源插座上扳下,确保在远离水分的干燥区域内使用并存放机器。当不使用时,应关闭机器并从电源,并且从插座上拔下电源。外壳可以用轻湿布清洁。仅使用随机器配备的电源适配器。使用其他适配器可能会产生风险。







说明书内容会根据产品升级不定期进行修订,可能会与实际产品略有出入,具体以实际产品为准,请您谅解!

Smart Mini Product Manual

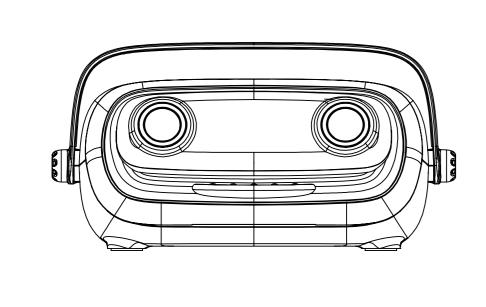


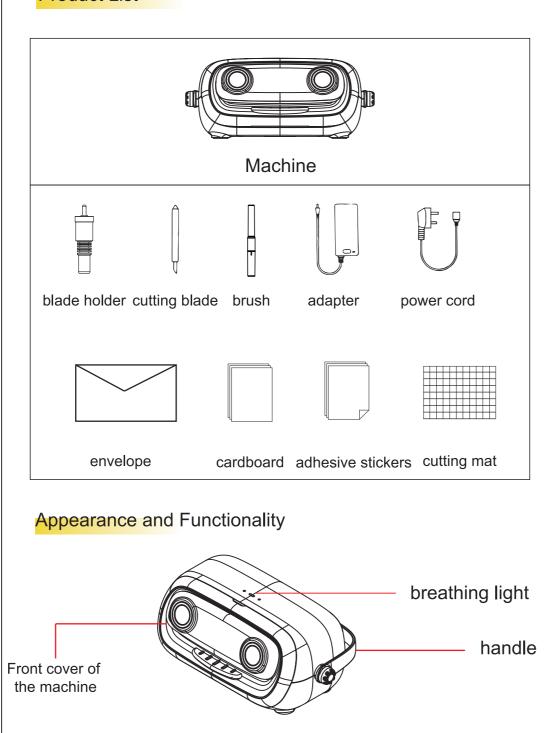

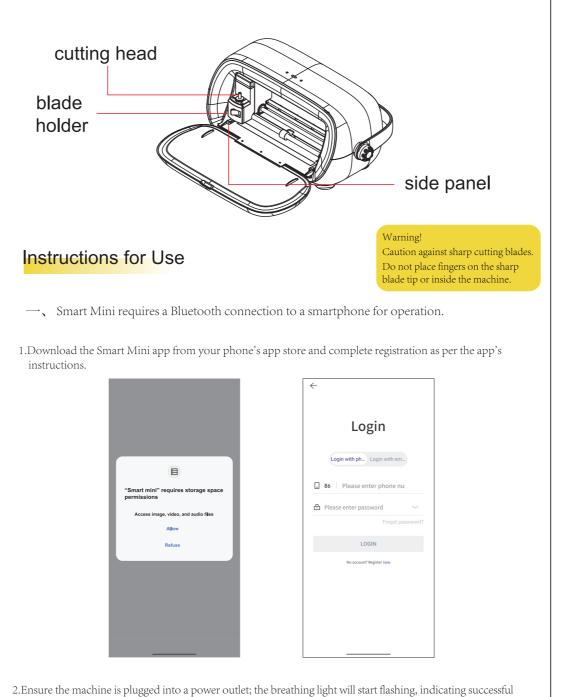

3. From the app's main interface, select the cutting project, click to add it to the canvas, and connect the

machine's Bluetooth to the canvas.

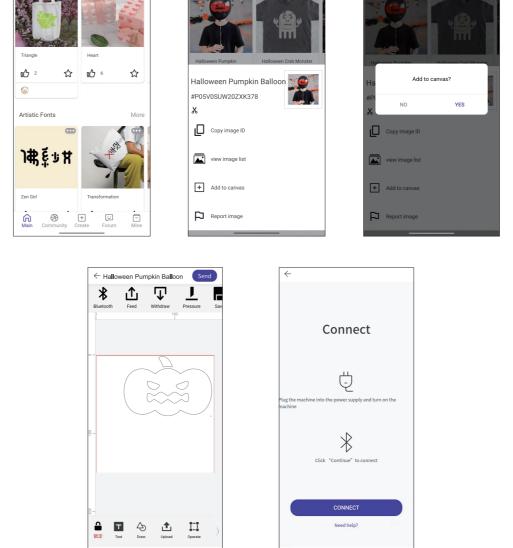

4. You can now use your Smart Mini.

Product Specifications

| Product Specifications | | | | | | |
|--------------------------|-------------------|--|--|--|--|--|
| Machine model | Smart mini | | | | | |
| Machine size | 244.6*143*117.5mm | | | | | |
| Machine gross/net weight | 3.6kg/2.5kg | | | | | |
| Maximum cutting size | 152.4mm | | | | | |
| Cutting pressure | 0-500g | | | | | |

For your safety and to prevent damage to the S1 household engraving machine, it's important to read and understand this manual before operating the machine. This device is not suitable for individuals with disabilities (including physical or mental impairments), children using it independently, or individuals lacking experience and relevant knowledge. During operation, keep flammable or explosive materials and pets away from the machine.

When replacing cutting blades, ensure the machine is turned off and unplugged from the power outlet. Use and store the machine in a dry area away from moisture. When not in use, turn off the machine, unplug it, and remove the power plug from the socket. Clean the exterior using a lightly damp cloth. Only use the power adapter provided with the machine. Using other adapters may pose risks.

△ Notice

| l | | |
|---|---------------------------------------|--|
| | | Avoid scratching your fingers |
| | | The working environment where the machine is placed must be clean and tidy to prevent metal liquids from falling into the machine and cause fires, and there must be enough installation space. |
| | S | It is forbidden to damage or replace the original power cord. Do not excessively bend, pull, bind, or press the power cord under heavy objects to prevent damage to the power supply and cause electric shock or fire. |
| | | If you do not use the machine for a long time, please disconnect the machine power to prevent fire. |
| | | The table where the machine is placed must be flat and stable to prevent the machine from falling. |
| | B W | When you want to disconnect the power, please grip under the plug and pull it out. Do not pull the cable. Forcibly pulling the cable may cause electric shock or fire. |
| | * * * * * * * * * * * * * * * * * * * | Prohibited to use during thunderstorms to avoid being hit by lightning |
| | * | Prohibit unauthorized disassembly |

The content of this manual is subject to occasional revisions due to product upgra des and may slightly differ from the actual product. Please refer to the actual product for precise information. Thank you for your understanding!

技术要求

1、尺寸: 按图所示

2、材质: 铜板纸正反面印刷

| 销售 | 部 | | 采购部 | 品质 | 部 | | 生产部 | | | | 环盛智能(深圳)有限公 | |
|----|------|-----|-------|-----|------|----|-------|--------|---------------|---------|--------------|--|
| 设计 | (签名 | 子)(| (年月日) | 标准化 | (签名 | 3) | (年月日) | 阶段标记 | 数量 | 比例 | 说明书 | |
| 审核 | | | | | | | | 产量 | 双 <u>1</u> | נילו טע | | |
| 工艺 | | | | 批准 | | | | 共1页第1页 | | | A5/S1-04-005 | |