 


MATE-A9 Controller Operation Quick Guide




A: Input Designs




B: Choose a Design



C: Manual modification method

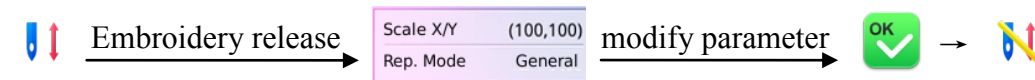

D: Position Idling

 


G: Design border operation




I: Manual Trimming



 E: Return to start point




H: Return to stop point

 

J: Manually shifting head



F: Set color changing order

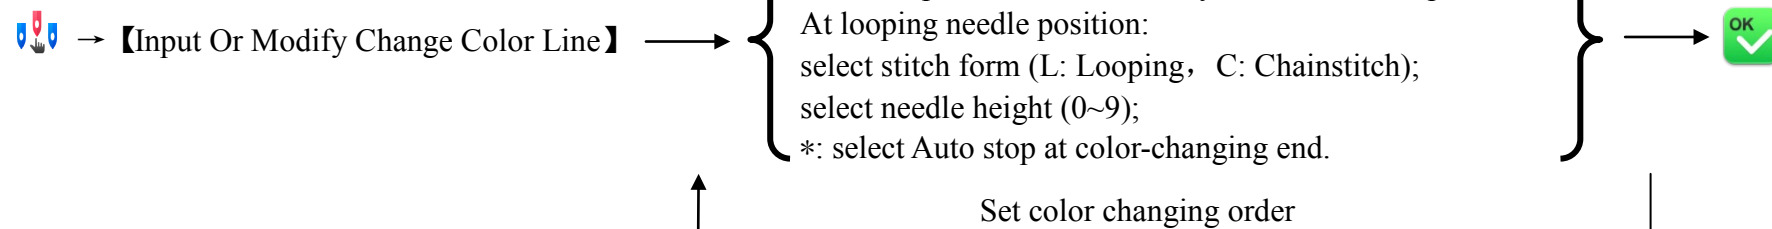

MATE-A9 Controller Operation Quick Guide



K: Set cyclic embroidery

 → 【Embroidery Assistant Parameter】 → 【To Do Cyclic Emb.】 change to "Yes"

L: Manual select chain or loop stitch

 → 【Manual Shift Stitch Form】 → Select stitch form → 

M: Setting another start

 → 【Setting Another Start】 → Move frame to offset point → 

N: Close Bad head

 → 【ON/OFF Machine Head】 → Select head for activation → 

O: Thread-loosing Position Adjustment

 → 【Thread Loosing Posi. Adj.】 → Adjust Thread-loosing Position → 

P: Manual Needle Height Adjustment

 → 【Needle Height Adj.】 → Input Set Value → 

Q: Manual Color-Changing

Press number key to input needle position

R: Let Needle Down

 → 【Stitch Stop Down】 → 

Note:  as Function Shift;