

1: 打开“注册工具” 点击“联机”按钮(先确定校准工具能连上), 点击“连接”按钮, 获取“板卡 ID”



2: 打开“注册机”，把注册工具获取到的“板卡 ID”拷贝到板卡 ID 文本框里，选择“类型”（目前只支持限制平方数），填写板卡注册次数（该板卡是第几次注册了），点击“生成注册码”按钮，按“复制注册码”按钮，拷贝注册码。

The image shows a software registration window titled "P 注册机". The window contains the following fields and controls:

- Two "ID" labels, each followed by a text input field and a dropdown menu.
- A "类型" (Type) label, followed by a dropdown menu showing "限制平方:" (Limit square:), a text input field containing "50", and another dropdown menu showing "平方米" (Square meters).
- A "板卡注册次数" (Board card registration count) label, followed by a text input field.
- A "注册码" (Registration code) label, followed by a large text input field.
- Three buttons at the bottom: "生成注册码" (Generate registration code), "复制注册码" (Copy registration code), and "取消" (Cancel).

3: 点击“粘贴注册码”按钮，把步骤2获取到的注册码，粘贴到注册码文本框，点击“注册”按钮，下面就会显示注册的信息。

注册工具

注册功能

板卡ID: 95486949

注册码: vxf4hFoFHMVjJDXODdGCQ:

注册 粘贴注册码

还可以打印 199.92平方米, 板卡被注册 4 次

打印机IP 196 . 12 . 0 . 25 本机IP 196 . 12 . 0 . 187 连接 退出