

How to Switch Interface Back to English

1. Reboot the system, if you see anything interface other than this one, press **ESC** and you will land on the interface like this

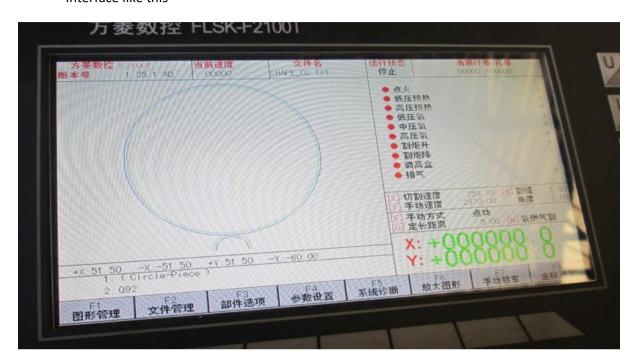


2. Press F5 you will see this interface

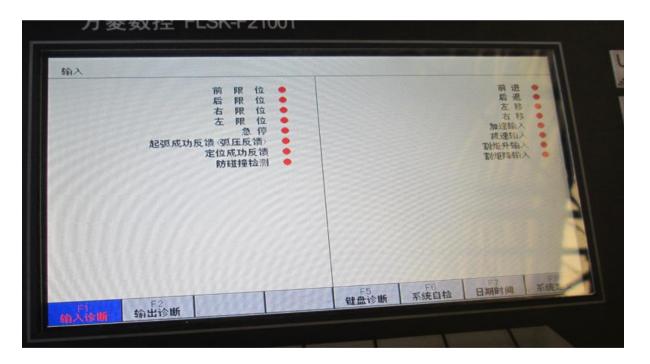

3. Then **F8**

BUSINESS	THE COLUMN	
	参数备份	
	Chinese	
THE REPORT OF THE	添加语言文件	
\$	清空文件	
	版本号v 3 <u>系统升级</u> Arm Build: Oct 29 2014 14 41 47	
AND REAL PROPERTY OF THE PARTY	DSP Build: 0ct 21 2014 11 06 02	
	F海奈存数控设备有限公司	
THE RESERVE OF THE PERSON	Shanghai Jiaoyi NC Equipment Co. Ltd.	
Ministration of the second	产品型号:F2100T Tel : +96-21-34121295	
· 图1000年代2月1日2月1日日1日1日日1日日1日日1日日1日日1日日1日日1日日1日日1日日1日日1	Fax +86-21-34290970	
	Email support@flenc.com	
	WEB http://www.flcnc.com	
		2558.888 A
	SN 20141106	-
	F3 F4 F5 F6 语言	· · · · · · · · · · · · · · · · · · ·
F1 F2 参数备f	F3 加密 解密 语言	


4. Press **ARROW DOWN** key to move to language setting

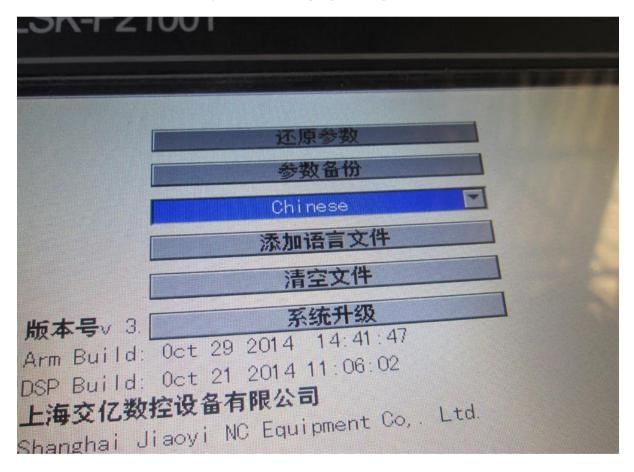

5. Press ENTER to list all available languages



6. Press ARROW Key Select Language and Press ENTER

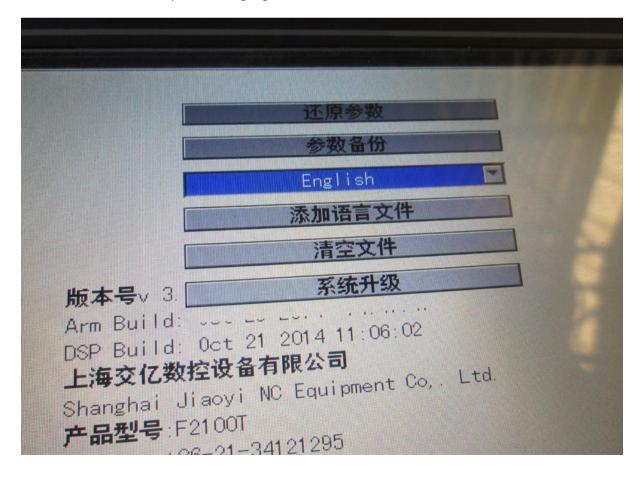

7. Press ESC key and go back, your system display language has been changed

