


3.3 Installation of USB Driver

3.3.1 If you use the Serial port to output, then it is not necessary to install the USB driver. The computer can read the cutting plotter directly! In cutting software, please select COM1 as output port.*

3.3.2.If you use USB cable to connector the plotter to computer, then need to install the USB driver, please see below manual:

A:Insert the driver CD into the computer, find the folder with driver in ,then double click

the  MK driver Setup.exe file, the computer will display as follows:

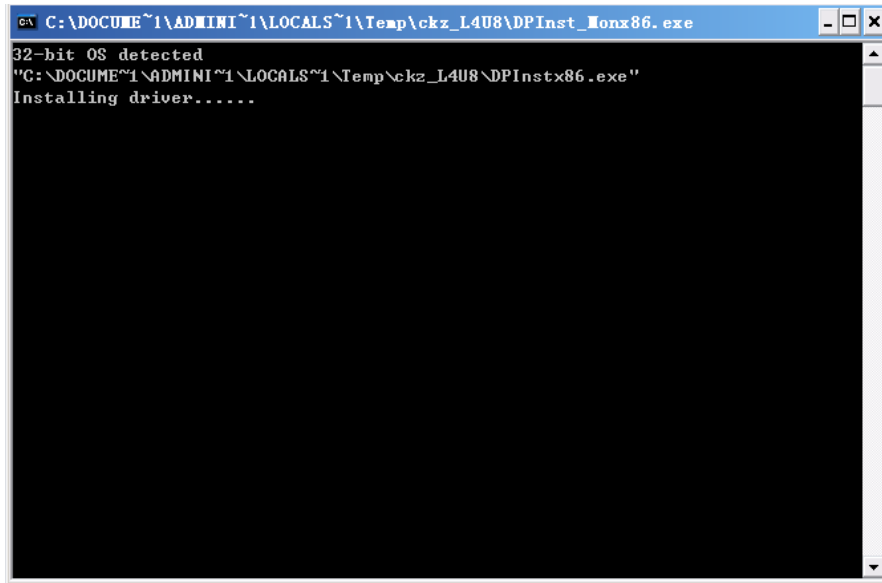

```
C:\DOCUMENTS\ADMINI~1\LOCALS~1\Temp\ckz_L4U8\DPInst_Monx86.exe
32-bit OS detected
"C:\DOCUMENTS\ADMINI~1\LOCALS~1\Temp\ckz_L4U8\DPInstx86.exe"
Installing driver.....
```


After the driver installation, it will close automatically.

b: Connect the plotter to the computer with USB cable , turn on the power of plotter, the driver will be installed automatically


c : Click "My Computer" pop-up shortcut menu, click "Properties" dialog box pop-up is as follows:



Click the "Device Manager" pop-up dialog box as follow:

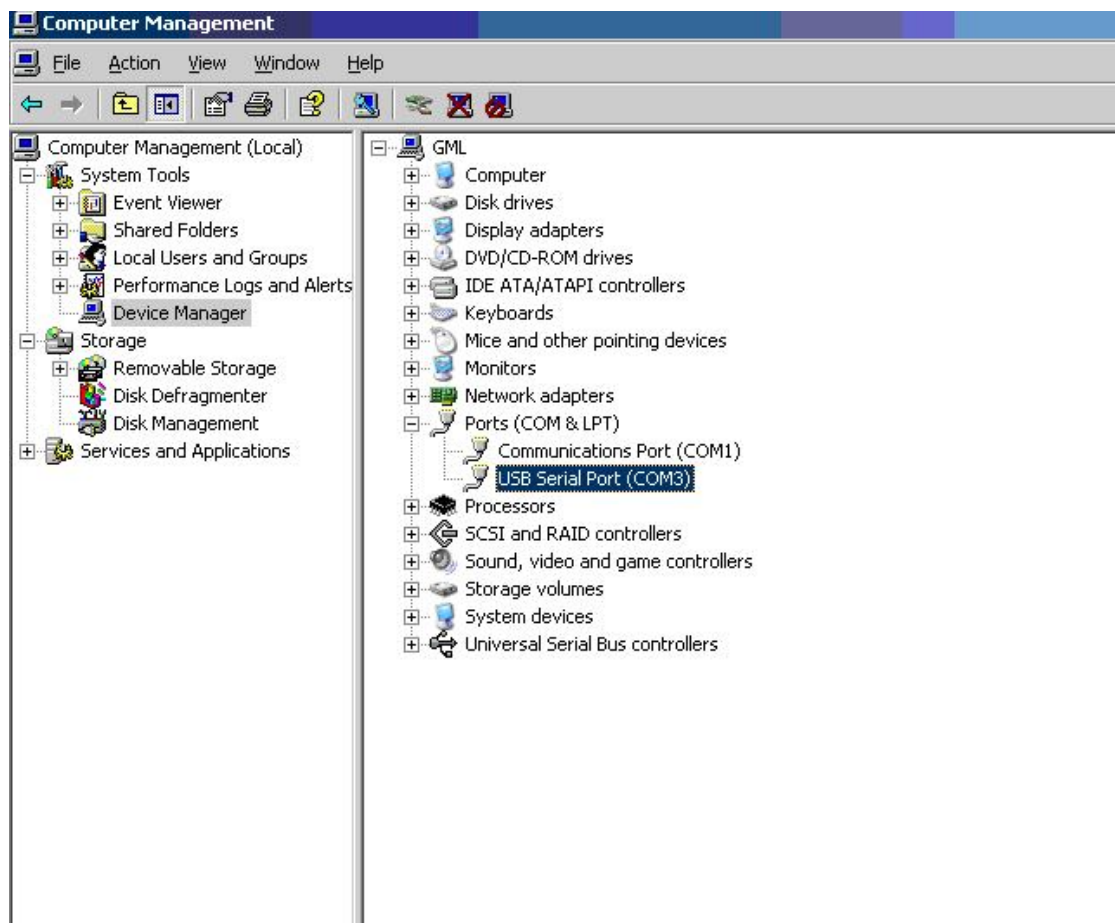

Select COM3 click right mouse button , Set the baud rate as 38400

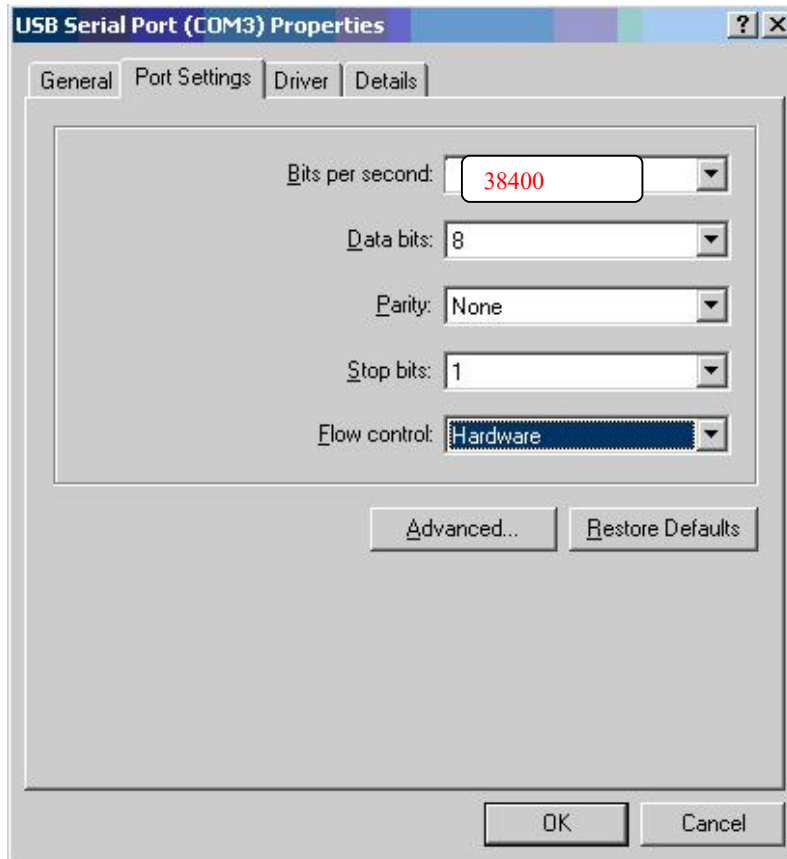

and click “advanced”, and see below, the COM port can be changed.

