## VAUTO VINYL CUTTER FIRMWARE UPGRADE TO VERSION 004.32F

1. On the V-Auto start up screen take note of your current Firmware version before proceeding. (V 004.XXF )



2. Move Resistor from original position and solder it across contacts A and B(Writing mode).



- 3. Connect the motherboard to your computer via USB or Serial Cable and power it up.
- 4. Take note of the COM Port on which the motherboard is connected on.



5. Download the "Firmware Upgrade Software" from the link given below.

https://drive.google.com/drive/folders/0B7txahny5oSFMGtwOVQtc0YwNTA?usp=sharing

6. Run update\_fw\_2.1 executable file.

7. Select the COM port as per your specific connection and click on "Open Com".

update fw 2.1	
COM: COM7	Open Com
STATUS: Port Closed	
00:00	

8. The Firmware update tool will automatically start downloading the necessary files on to the motherboard.

<b>55</b>	u	odate fw 2.1		-	□ ×
CO	M: COM1	<b>•</b> [	Close Port		
ST/	ATUS: 10000 / 68028				
	•	00 : 04			

update_fw_2.1				COM:
		update_fw_2.1 📘		
down ok		down ok		
STATUS: Conni 确定		确定	Conn	STATUS:

9. Once completed you should get a "down ok" notification.

10. Disconnect the motherboard and solder the resistor back onto its original sitting position.



11. Connect and power up the Vinyl Cutter. You should get a change in the Version on the startup screen. (V 004.XXF)