




First. Choose

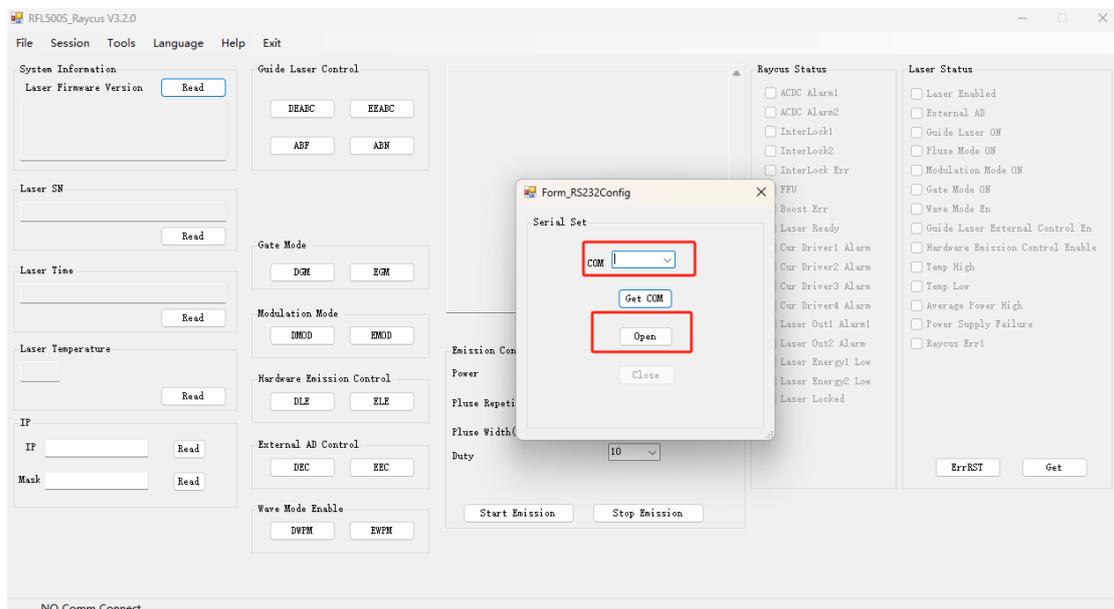


Then open RS232 port

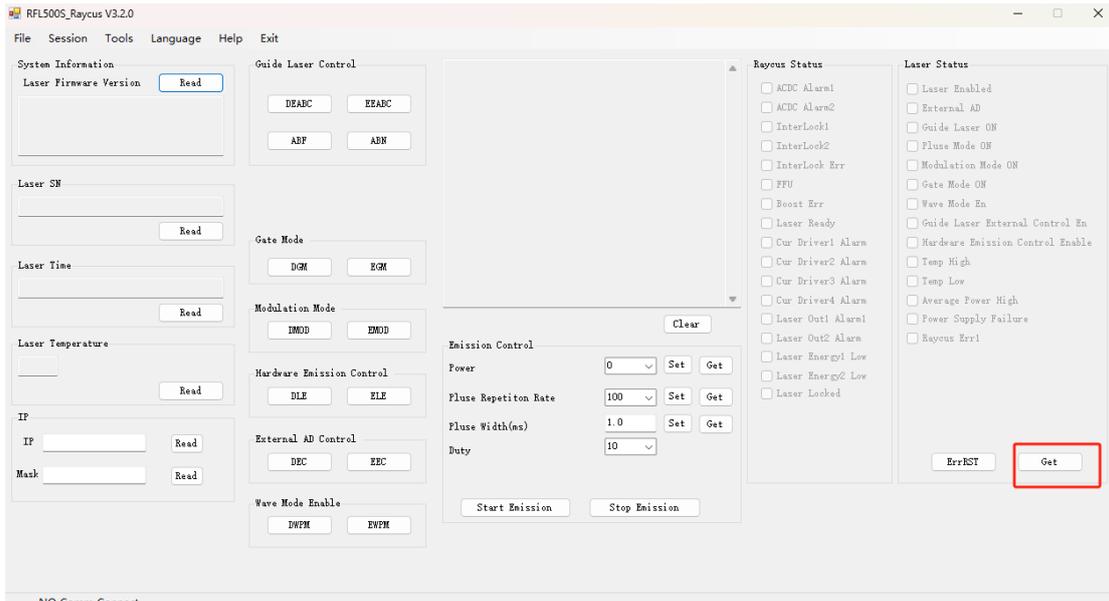


Get laser condition

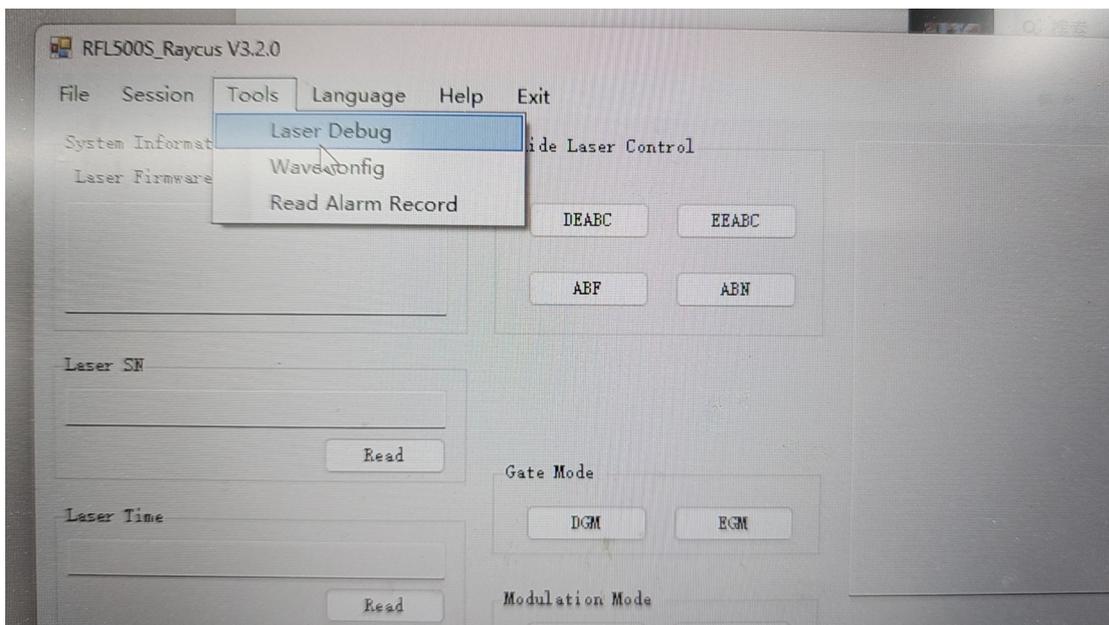


Click tools into laser debug PASSWORD 1234

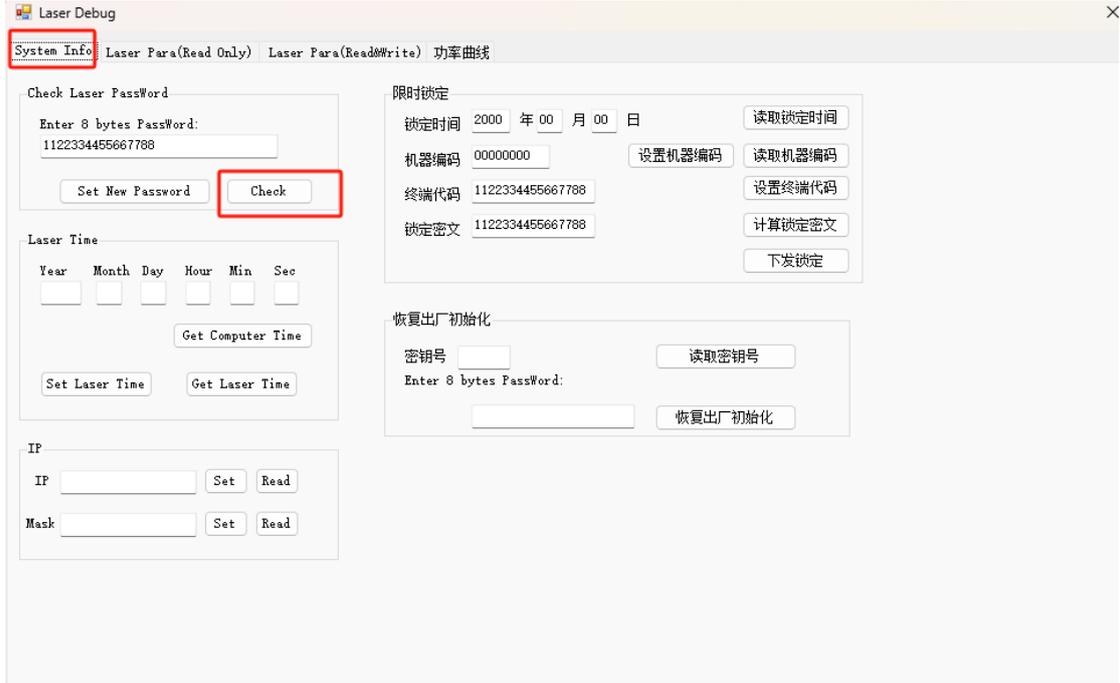


## CHECK FIRST

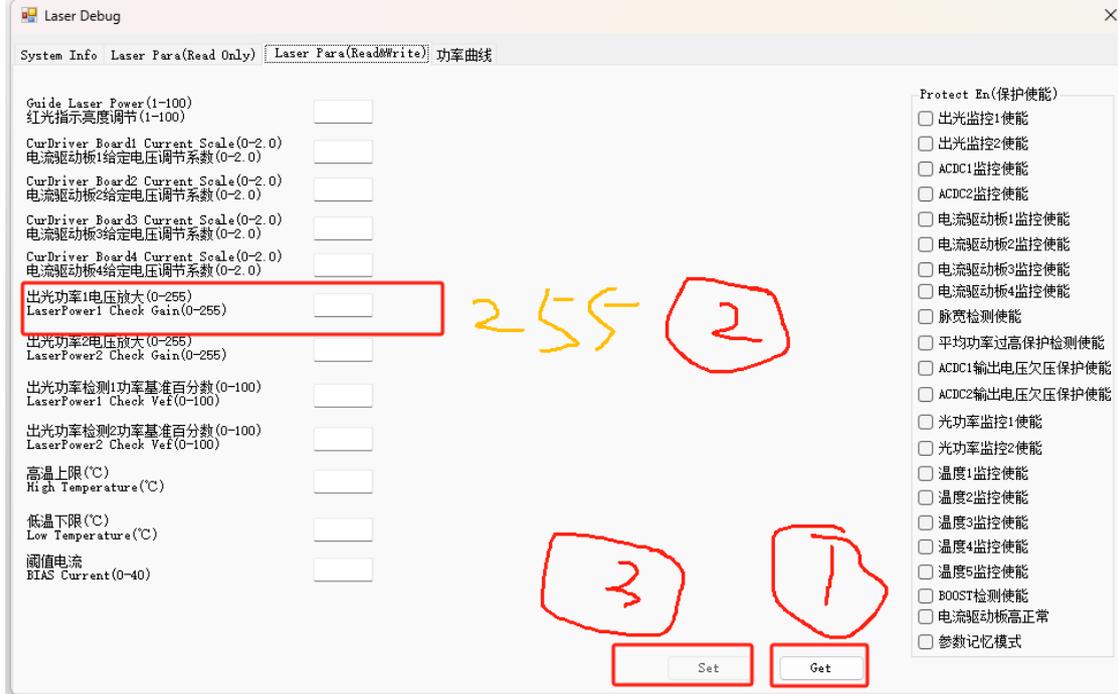

GET ----- Revised to 255 -----set

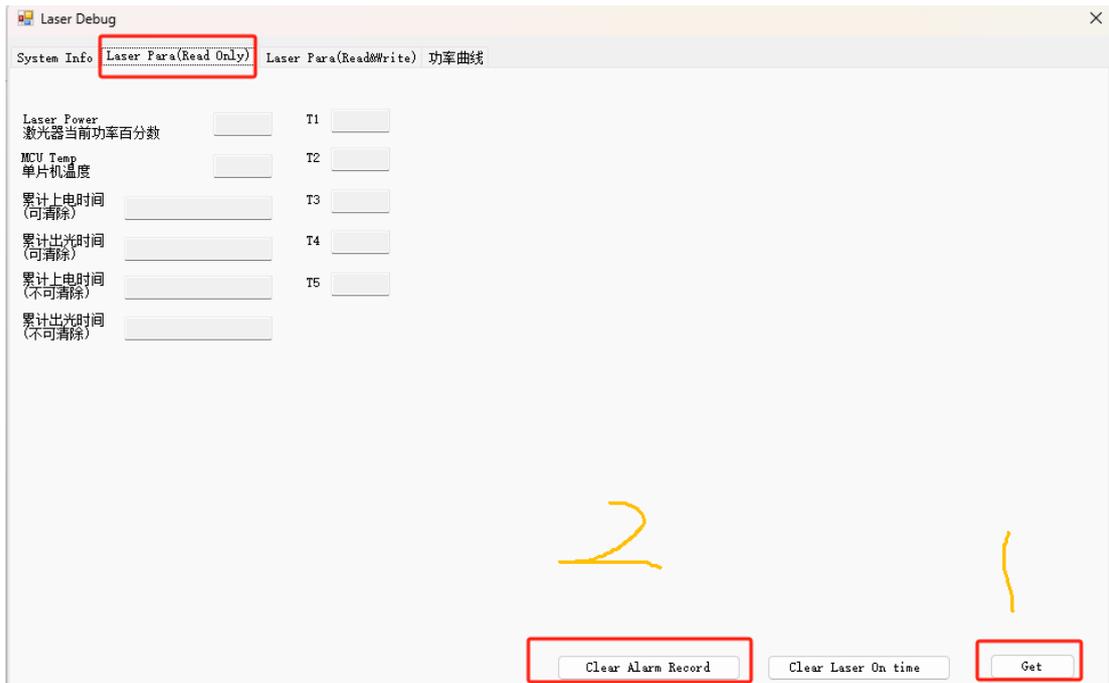

LASER PARA get then clear alarm record

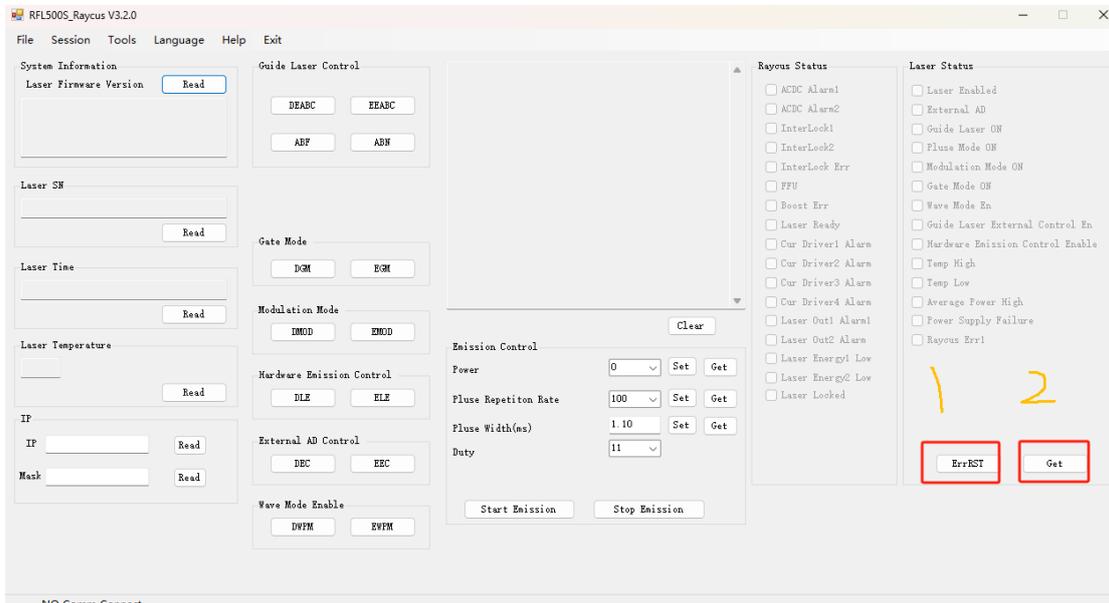

CLOSE LASER DEBUG THEN ErrRSET AND GET

Then take photos of this interface to raycus engineers.