


How to Adjust CMA ITV1000/2000/3000 Electro-Pneumatic Regulator

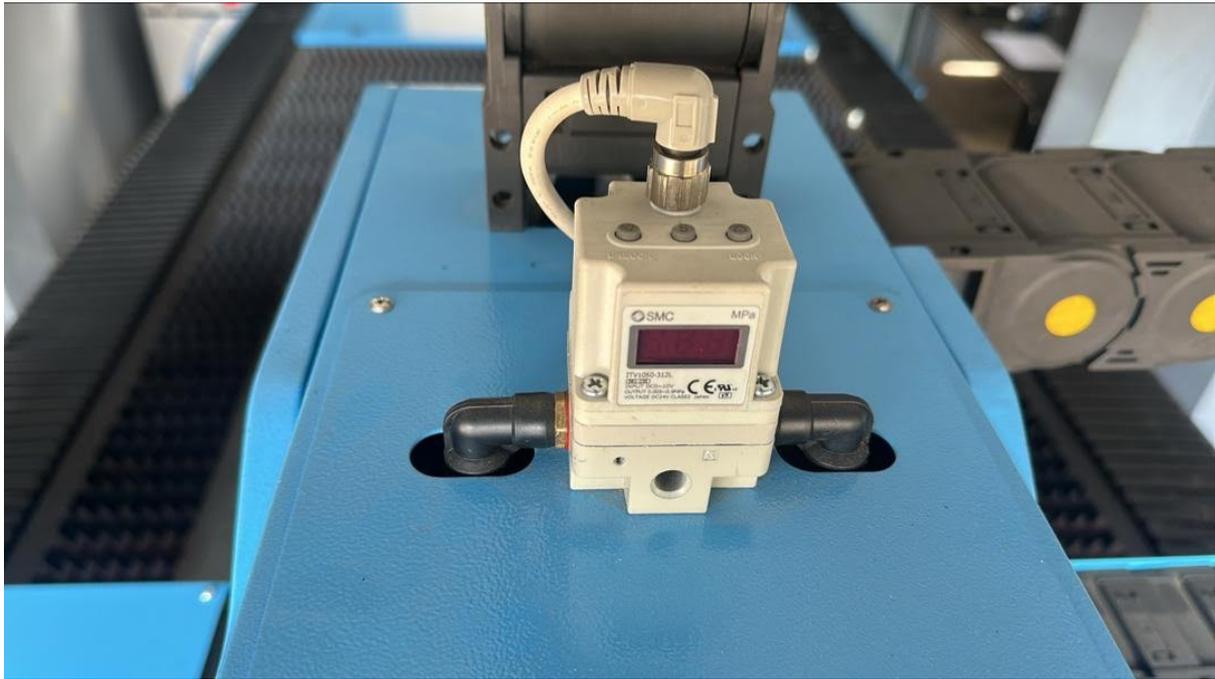

Video is here: <https://www.youtube.com/watch?v=ZdLLOVKGWkE>

1. Engage blow setting to switch on the valve.
2. Hold unlock button for 5 seconds (far left button). Once unlocked, select S button (middle button) to set parameters.
 - F_1 parameter = minimum output pressure.
 - F_2 parameter = maximum output pressure.
3. Use arrow keys to set the pressure values for minimum and maximum output.
4. once set press the S button (middle button) and disengage Blow function.